

Limited Warranty Information

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- **Water Damage**

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and will, therefore not be covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation

- **Paint & Color (Retention and/or Loss)**

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading within the first year from date of purchase with the above exclusion.

- **Procedure/Service**

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Alpine Corporation at www.alpine4u.com. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. Item is covered under one year limited warranty from the date of purchase. When requesting replacement parts due to a warranty claim after 30 days of purchase, credit card information will be requested for shipping charges.

- **Not Covered Under Warranty**

The limited warranty will NOT cover cases of damages due to

1. Damages caused in Transit
2. Inadequate care and/or neglect
3. Environmental and/or natural elements
4. Immersion in water, unless specified
5. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.



LED112T/312T LED Light with Photocell & Transformer



(LED112T)



(LED312T)

2 Year Warranty

Assembling & Using Your Product

Unpack all components carefully. Please check to ensure all parts have been removed from their packaging.

Components:

- 1 Light (LED112T) or 3 Lights (LED312T)
- Transformer
- Photocell
- 2 Garden Stakes (LED112T)
- 4 Garden Stakes (LED312T)
- Color lenses (Yellow, Red, Green, Blue)
 - 1 set for LED112T
 - 3 sets for LED312T


Product Information:

LED112T

- 1.6 Watts per light consumption
- Light head dimension: 2.25"D x 3"H
- Garden stake dimension: 1"D x 7"H
- Transformer
 - Input: 120V AC 60Hz 3.3W
 - Output 12V AC 200mA
- 22 total feet cord length
 - 16 feet to photocell
 - 6 feet from photo cell to light head

LED312T

- 1.6 Watts per light consumption (4.8 watts total)
- Light head dimension: 2.25"D x 3"H
- Garden stake dimension: 1"D x 7"H
- Transformer
 - Input: 120V AC 60Hz 5.6W
 - Output 12V AC 300mA
- 33 Total feet cord length
 - 7 feet to photocell
 - 16 feet from photo cell to light head
 - 5 feet between each light head

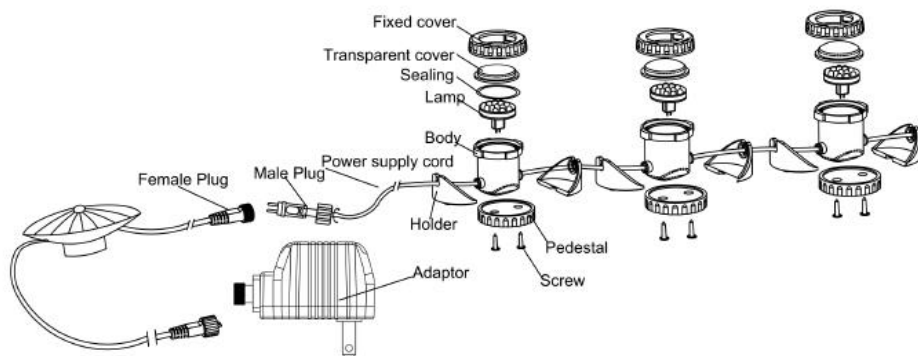

Main Features

- Super bright LED light that offers low energy consumption, for an environmentally friendly solution to standard lighting
- Low voltage design for safe handling and lower energy costs
- Waterproof design can be used in or out of water
- Sleek design housing with adjustable head, garden stake and 4 colored lenses
- Photocell will automatically turn on the light(s) at dusk and then turn off at dawn

Operation

- Place the light in your pond, water feature or attach the garden stake and place in your garden in the direction you would like to illuminate.
- Connect the cable to the transformer: Plug the male connector pin into the female connector on the transformer; turn the locknut clockwise until tight.
- Plug the transformer into a standard 110 Volt outlet and enjoy your new light.
- LED312T can be used with or without the photo cell. Photo cell enables the lights to automatically turn on at night and automatically turn off during the daytime. Removing the photo cell will enable the lights to be on constantly.

Useful Information

- Connect multiple lights using Alpine's socket connectors, male connectors, Quick Connect Lighting Cables and transformers.
Note: Do not exceed the wattage of the transformer in any combination.

Replacement Parts

Color lenses

- RP-COR-LEN

Transformer

- PL022T

Bulbs

- RBSLED12
- RBSLED12WW

Other Alpine products to use with this item

Transformer

- PL022T, PL102T, PL104T, PL106T, PL108T

Connectors

- PLMP, PL3, PL4, PL6

Quick Connect Light Cable

- PL325 and PL350

How to Replace LED Bulb and Lens

Step 1: Turn the black lock ring to the left



Step 2: Remove the lens



Step 3: Pull the LED bulb out



Step 4: Replace the LED bulb and place back into the socket



Step 5: Place the lens back in place



Step 6: Turn the black lock ring to the right

